



USER MANUAL

Model 365510

Digital Stopwatch



Introduction

Congratulations on your purchase of the Extech 365510 Digital Stopwatch with Split Time, Two Competitor monitoring, Alarm and Clock features. The accuracy of the clock is ± 3 seconds per 24 hours. Careful use of this stopwatch will provide years of reliable service.

Operation

NORMAL MODE

1. In Normal Mode the Hours/Minutes/Seconds and the day of week are displayed.
2. Press and hold the SPLIT/RESET button to view the Alarm Time.
3. To turn the Alarm ON or OFF, press the START/STOP button while holding down the SPLIT/RESET button (the bell icon in the upper right-hand corner of the display is on when the Alarm is turned ON).
4. Press and hold START/STOP to view the calendar month and date.

STOPWATCH MODE (To access, press the MODE button once from Normal Mode)

When the Stopwatch Mode is first accessed, the SU-FR-SA icons will flash.

A. Elapsed Timer

1. Press Start/Stop to Start (SU-SA icons flash)
2. Press Start/Stop to Stop (SU-FR-SA icons flash)
3. Press Start/Stop Restart
4. Press Start/Stop to Stop
5. Press Split/Reset to reset the display. Press MODE to return to Normal Mode.

B. Split Time

1. Press Start/Stop to Start (SU-SA icons flash)
2. Press Split/Reset to Split (SU-TH-SA icons flash)
3. Press Split/Reset to release Split (SU-SA icons flash)
4. Press Start/Stop to Stop (SU-FR-SA icons flash)
5. Press Split/Reset to reset the display. Press MODE to return to Normal Mode.

C. Two Competitor Timer

1. Press Start/Stop to Start (SU-SA icons flash)
2. Press Split/Reset to Split (SU-TH-SA icons flash)
3. Press Start/Stop to Stop (SU-TH-FR-SA icons flash)
4. Press Split/Reset to release Split (SU-FR-SA icons flash)
5. Press Split/Reset to reset the display. Press MODE to return to Normal Mode.

NOTE: Press all three buttons simultaneously to return to the Elapsed Timer mode.

SETTING DATE AND TIME (To access, press MODE button 3 times from Normal Mode)

Press SPLIT/RESET to scroll through the programmable digit fields. The flashing digit is the digit that is ready to be edited. Use the START/STOP button to edit the flashing digit. When setting the hours, minutes, and seconds, you can press START/STOP to reset the selected digit to zero; press and hold it down to quickly scroll. The hour digits will scroll through A (for AM), P (for PM) and H (for 24-hour clock). Press MODE to return to normal operation.

ALARM SET (To access, press MODE twice from the Normal Mode)

1. Once ALARM SET mode is accessed, the hour indicator and MO icon will flash.
2. Press STOP/START to change the hour. This step also activates the alarm and displays the alarm indicator icon (bell in upper right-hand corner of the display).
3. Press SPLIT/RESET to select minutes.
4. Press STOP/START to advance the minutes.
5. Press MODE to save alarm setting and to return to time display.
6. To enable the Alarm, follow the instructions in step 3 of the Normal Mode section. Note that the Alarm time setting will reflect the AM, PM, or H mode programmed above in the SETTING DATE AND TIME section.

ALARM SNOOZE and ALARM SILENCE

When the alarm sounds, press START/STOP; a 5-minute snooze period will begin. To silence the alarm without snooze, press SPLIT/RESET after the alarm sounds.

HOUR CHIME (stopwatch beeps once every hour on the hour)

To set the Hour Chime ON, press and hold SPLIT/RESET, then press MODE (while continuing to hold SPLIT/RESET) until the days of the week appear on the top of the LCD. To turn Hour Chime OFF press MODE (while continuing to hold the SPLIT/RESET button) until the days of the week switch OFF.

Battery Replacement

This stopwatch uses an LR-44 or A-76 alkaline button battery (see safety information on next page). The Phillips head screws on the rear must be removed to access the battery. It is recommended that a qualified technician replace the battery. Battery life is typically one year.

Two-year Warranty

*Teledyne FLIR warrants this Extech brand instrument to be free of defects in parts and workmanship for **two years** from date of shipment. To view the full warranty text please visit: <http://www.extech.com/support/warranties>.*

Contact Customer Support

Customer Support Telephone List: <https://support.flir.com/contact>

Technical Support: <https://support.flir.com>

Copyright © 2024 Teledyne FLIR Commercial Systems, Inc.

All rights reserved including the right of reproduction in whole or in part in any form
www.extech.com


This document does not contain export-controlled information



WARNING : Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

WARNING

- **INGESTION HAZARD** : This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns in as little as 2 hours.**
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN.**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.

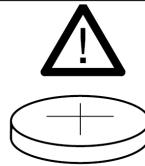

WARNING

- a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- b) Even used batteries may cause severe injury or death.
- c) Call a local poison control center for treatment information.
- d) The compatible battery type: LR44.
- e) The nominal battery voltage: 1.5V DC.
- f) Non-rechargeable batteries are not to be recharged.
- g) Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- h) Ensure the batteries are installed correctly according to polarity (+ and -).
- i) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- j) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- k) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.