


User's Guide



Phase Sequence and Motor Rotation Tester
Model 480403

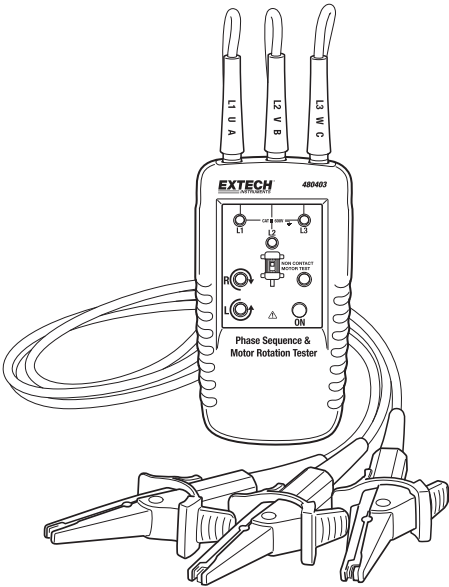

Introduction

Congratulations on your purchase of the Extech Model 408403 Motor and Phase Rotation Indicator. This handheld instrument detects the rotational field of three-phase systems and determines motor-rotation direction. Color-coded test leads are provided for connecting to the system or motor under test. This meter is shipped fully tested and calibrated and, with proper use, will provide years of reliable service.

Safety

International Safety Symbols



Caution ! Refer to the explanation in this Manual



Caution ! Risk of electric shock



Earth (Ground)



Double Insulation or Reinforced insulation



AC, Alternating Current or Voltage



DC, Direct Current or Voltage


Safety Procedures

To avoid possible electric shock or fire, observe the following:

- Read the following information carefully before using or servicing the instrument.
- Adhere to local and national safety codes.
- Individual protective equipment must be used to prevent shock and injury.
- Use of instrument in a manner not specified by the manufacturer may impair safety features/protection provided by the equipment.
- Avoid working alone.
- Inspect the test leads for damaged insulation or exposed metal. Check test lead continuity. Damaged leads must be replaced. Do not use the meter if it appears damaged.
- Use care when working above 30V ac rms, 42V ac peak and 60V dc. Such voltages pose a shock hazard.
- When using the probes, keep fingers away from probe contacts. Keep fingers behind the finger guards on the probes.
- Measurements can be adversely affected by impedances of additional operating circuits connected in parallel or by transient currents.
- Verify operation prior to measuring hazardous voltages (voltages above 30V ac rms, 42V ac peak and 60V dc).
- Do not use the meter with any of the parts removed.
- Do not use the meter near explosive gas, vapor, or dust.
- Do not use the meter in a wet environment.

Meter Description

1. L1 test Lead input to meter
2. L3 test lead input to meter
3. L2 test lead input to meter
4. L1 status LED
5. Orientation symbol for non-contact testing
6. L3 status LED
7. L2 status LED
8. Power ON status LED
9. ON button
10. Left/Right Clockwise/Counter-Clockwise status LEDs
11. Test lead alligator clips

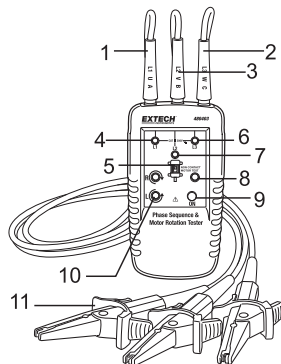

Operation

Determine Phase Rotation Direction

1. Connect the supplied color-coded test leads to the meter's test lead input jacks at the top of the meter.
2. Connect the test probes to the three mains phases for the system under test.
3. Press and Hold the ON button to turn the meter on.
4. L1, L2, and L3 indicators will illuminate for each phase connected, respectively.
5. The clockwise and counter-clockwise arrows with the left/right 'L' or 'R' icons display the phase rotation direction (phase sequence) of mains as connected.
6. To understand the status of a test, based on the condition of the meter's front panel LEDs, refer to the table printed on the meter:

Note: The rotational indicator LEDs illuminate even if one of the test probes is connected to a neutral or ground conductor instead of one of the mains phases.

Check Motor Turn Direction (contact method)

1. Connect the supplied color-coded test leads to the meter's test lead input jacks at the top of the meter.
2. Connect the test (alligator) probes to the three motor connections (L1 to U, L2 to V, and L3 to W).
3. Press and Hold the ON button. The green ON indicator shows that the instrument is ready for testing.
4. Turn the motor shaft continuously in a clock wise rotation.

Note: you must rotate the shaft with enough speed to generate a voltage that can be detected.

5. The clockwise and counter-clockwise arrows with the left/right 'L' or 'R' icons display the orientation of the motor.


Check Motor Turn Direction (non-contact method)

1. Disconnect the test leads from the meter and from any other devices under test.
2. Hold the meter close (one inch or closer) to the motor, parallel to the length of the motor shaft.
3. The bottom of the meter should face the drive shaft and the back of the meter should be flush with the motor (refer to diagram at right).

Note: There is an orientation symbol on the meter to assist.

4. Press and Hold the ON button. The green ON indicator shows that the instrument is ready for testing.
5. The orientation of the motor is represented by the clockwise and counter-clockwise arrows with the left/right 'L' or 'R' icons display. Face the rear of the motor (meter will appear upside down) when reading the status of the display LEDs.

Note: The meter will not operate with motors controlled by frequency converters (VFDs).

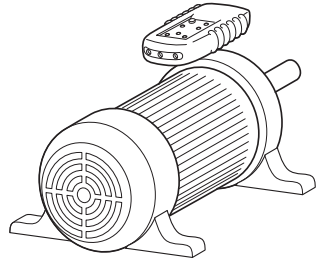

Magnetic Field Detection

1. Hold the meter in the area under test. Press and hold ON button.
2. A magnetic field is present if either the clockwise or the counter-clockwise LED illuminates.

Battery replacement

The meter uses a 9V battery (supplied) as a power source. If the green LED does not light when the ON/OFF button is pressed, replace the battery.

1. Place the meter on a clean, flat, non-abrasive surface.
2. Loosen the rear bottom Phillips head screw to access the battery compartment.
3. Lift the battery access door and replace the 9V battery observing polarity.
4. Place the battery carefully in the compartment without crimping the black and red battery connecting wire.
5. Close the access door and secure the screw.

Specifications

Environmental Specifications

Operating Temperature	32 to 104°F (0 to 40°C)
Operating Humidity	15 to 85% relative humidity
Operating altitude	2000m
Pollution Degree 2	
Approvals	DIN / VDE 0411 IEC 61010 DIN / VDE 0413-7

Mechanical Specifications

Dimensions	(H x W x D): 5.1 x 2.7 x 1.3"(130 x 69 x 32mm)
Weight	4.6 oz(130g)

Safety Specifications

Electrical Safety Approvals	IEC 61010/EN61010, IEC 61557-7/EN 61557-7
Maximum Operating Voltage (Ume)	600 V
Protection Levels	CAT III 600V

Electrical Specifications

Battery type	9V battery
Current Consumption	20mA max.
Battery life	One (1) year minimum
Nominal Voltage	40 to 600 VAC
Frequency Range (fn)	2 to 400H
Nominal Test current (in per phase)	< 3.5mA

Warranty

FLIR Systems, Inc. warrants this Extech Instruments brand device to be free of defects in parts and workmanship for one year from date of shipment (a six month limited warranty applies to sensors and cables). If it should become necessary to return the instrument for service during or beyond the warranty period, contact the Customer Service Department for authorization. Visit the website www.extech.com for contact information. A Return Authorization (RA) number must be issued before any product is returned. The sender is responsible for shipping charges, freight, insurance and proper packaging to prevent damage in transit. This warranty does not apply to defects resulting from action of the user such as misuse, improper wiring, operation outside of specification, improper maintenance or repair, or unauthorized modification. FLIR Systems, Inc. specifically disclaims any implied warranties or merchantability or fitness for a specific purpose and will not be liable for any direct, indirect, incidental or consequential damages. FLIR's total liability is limited to repair or replacement of the product. The warranty set forth above is inclusive and no other warranty, whether written or oral, is expressed or implied.

Calibration, Repair, and Customer Care Services

FLIR Systems, Inc. offers repair and calibration services for the Extech Instruments products we sell. NIST certification for most products is also provided. Call the Customer Service Department for information on calibration services available for this product. Annual calibrations should be performed to verify meter performance and accuracy. Technical support and general customer service is also provided, refer to the contact information provided below.

Support Lines: U.S. (877) 439-8324; International: +1 (603) 324-7800

Technical Support: Option 3; E-mail: support@extech.com

Repair & Returns: Option 4; E-mail: repair@extech.com

Product specifications are subject to change without notice

Please visit our website for the most up-to-date information

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

ISO 9001 Certified

Copyright © 2013 FLIR Systems, Inc.

All rights reserved including the right of reproduction in whole or in part in any form

www.extech.com

Garantie

FLIR Systems, Inc. garantit que cet appareil Extech Instruments est exempt de défauts matériaux et de fabrication pendant un an à partir de la date d'envoi (une garantie limitée de six mois s'applique aux capteurs et aux câbles). Si le renvoi de l'appareil pour réparation devient nécessaire durant ou après la période de garantie, contactez le service client pour autorisation. Pour obtenir les coordonnées, visitez le site Web suivant : www.extech.com. Un numéro d'autorisation de retour (AR) doit être délivré avant tout retour de produit. L'expéditeur prend à sa charge les frais d'expédition, le fret, l'assurance et l'emballage correct de l'appareil afin de prévenir toute détérioration durant le transport. Cette garantie ne s'applique pas aux dommages imputables à l'utilisateur, tels que l'usage impropre ou abusif, un mauvais câblage, une utilisation non conforme aux spécifications, un entretien ou une réparation incorrecte, ou toute modification non autorisée. FLIR Systems, Inc. déclinera spécifiquement toute garantie ou qualité marchande ou aptitude à l'emploi prévu, et ne sera en aucun cas tenu responsable pour tout dommage conséquent, direct, indirect ou accidentel. La responsabilité totale de FLIR est limitée à la réparation ou au remplacement du produit. La garantie définie ci-dessus est inclusive et aucune autre garantie, écrite ou orale, n'est exprimée ou implicite.

Calibrage, réparation et services après-vente

FLIR Systems, Inc. offre des services de calibrage et de réparation pour les produits Extech Instruments que nous commercialisons. Nous fournissons également une certification NIST pour la plupart des produits. Contactez notre service client pour toute information sur les services de calibrage disponibles pour ce produit. Un calibrage doit être effectué chaque année pour vérifier les performances et la précision du mètre. Nous offrons également une assistance technique et un service à la clientèle. Veuillez vous reporter aux coordonnées fournies ci-dessous.

Lignes d'assistance: États-Unis (877) 439-8324; international: +1 (603) 324-7800

Service d'assistance technique : Option 3 ; E-mail : support@extech.com

Réparations et retours : Option 4 ; E-mail : repair@extech.com

Les spécifications produit sont sujettes à modifications sans préavis.

Pour les toutes dernières informations, veuillez visiter notre site Web.

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

Certifié ISO 9001

Copyright © 2013 FLIR Systems, Inc.

Tous droits réservés, y compris la reproduction partielle ou totale sous quelque forme que ce soit.

www.extech.com

Garantía

FLIR Systems, Inc., garantiza este dispositivo marca Extech Instruments para estar libre de defectos en partes o mano de obra durante un año a partir de la fecha de embarque (se aplica una garantía limitada de seis meses para cables y sensores). Si fuera necesario regresar el instrumento para servicio durante o después del periodo de garantía, llame al Departamento de Servicio al Cliente para obtener autorización. Visite www.extech.com para Información de contacto. Se debe expedir un número de Autorización de Devolución (AD) antes de regresar cualquier producto. El remitente es responsable de los gastos de embarque, flete, seguro y empaque apropiado para prevenir daños en tránsito. Esta garantía no se aplica a defectos resultantes de las acciones del usuario como el mal uso, alambrado equivocado, operación fuera de las especificaciones, mantenimiento o reparación inadecuada o modificación no autorizada. FLIR Systems, Inc., rechaza específicamente cualesquier garantías implícitas o factibilidad de comercialización o idoneidad para cualquier propósito determinado y no será responsable por cualesquier daños directos, indirectos, incidentales o consecuentes. La responsabilidad total de FLIR está limitada a la reparación o reemplazo del producto. La garantía precedente es inclusiva y no hay otra garantía ya sea escrita u oral, expresa o implícita.

Servicios de calibración, reparación y atención a clientes

FLIR Systems, Inc., ofrece servicios de reparación y calibración para los productos que vendemos de Extech Instruments. Además ofrecemos certificación NIST para la mayoría de los productos. Llame al Departamento de Servicio al Cliente para solicitar información de calibración para este producto. Para verificar el funcionamiento y precisión se debe realizar la calibración anual. Además se provee Soporte Técnico y servicios generales al cliente, consulte la información de contacto en seguida.

Líneas de soporte: EE.UU. (877) 439-8324; Internacional: +1 (603) 324-7800

Soporte Técnico Opción 3; correo electrónico: support@extech.com

Reparación / Devoluciones: Opción 4; correo electrónico: repair@extech.com

Las especificaciones del producto están sujetas a cambios sin aviso

Por favor visite nuestra página en Internet para la información más actualizada

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

Certificado ISO 9001

Copyright © 2013 FLIR Systems, Inc.

Reservados todos los derechos, incluyendo el derecho de reproducción total o parcial en cualquier medio

www.extech.com