




# **Precision Milliohm Meters**

# Models 380460 and 380462

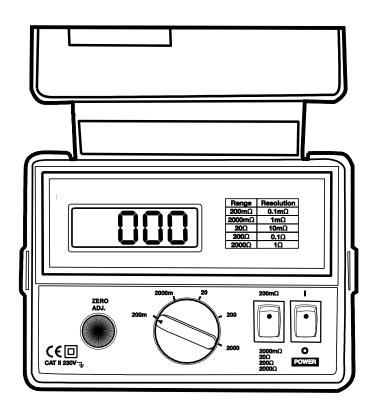


### Introduction

Congratulations on your purchase of the Extech Milliohm Meter Model 380460 (110V) or Model 380462 (220V). The milliohm meters are enclosed in rugged carrying cases for durability. Measurements are made with Kelvin test leads (supplied) for optimal accuracy in five (5) selectable ranges. Careful use of this meter will provide years of reliable service.

### **Meter Description**

- 1. LCD Display
- 2. Zero adjust knob
- 3. Range Dial
- 4. Power switch
- 200mΩ select switch
- 6. AC power cord
- 7. Kelvin lead to meter connections
- 8. Carrying case

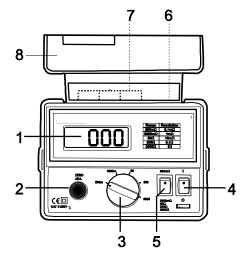


### Operation

#### **Basic Principles of 4-wire Measurements**

For each range, the meter provides a specific amount of test current (refer to General Specifications) which flows from the HI to the LO meter terminal and therefore from the HI to the LO clip lead (Refer to the diagram). This is the current that ultimately passes through the device under test (RX in diagram below).

Once the test current is applied to the device under test, clip leads Rx1 & Rx2 measure the voltage drop across the device under test. The following equations detail how the meter accomplishes its measurement tasks

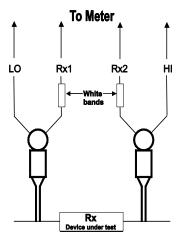

#### **Measurement Equations**

#### Vx = Is x Rx;

Where Vx is the voltage (measured by the meter) across the device under test; Is is the test current; Rx is the resistance of the device under test. From Vx = Is x Rx, the meter moves to the next step which is: Rx = Vx/Is. With this equation the meter determines the resistance of the device under test. Note that the measured resistance (Rx1 & Rx2) is not affected by stray resistance since the test current is supplied directly to the device under test. This is the advantage of the 4-wire Kelvin lead configuration over 2-wire methods which introduce errors into low resistance measurements.

#### International Symbols


===	DC Voltage DC Current	/TI	Refer to explanation in owners manual
$\sim$	AC Voltage AC Current	<b></b>	Dangerous voltage risk of electrical shock
<u>+</u>	Ground		Double Insulation

#### **Powering the Meter**

Connect the meter to the correct power source (110 or 220VAC); the Model 380460 uses 110VAC and the Model 380462 uses 220VAC (note that these meters are NOT interchangeable). Do not apply voltage to the meter input measurement terminals. Meter damage may result.

#### Measurement Procedure

- 1. Rotate the Range select switch to the desired range.
- 2. When using the 200m range, put the 200m select switch to the 200m position; for all other measurement ranges put this switch in the opposite position.
- 3. Perform a Zero Adjustment per the following:
  - Short the Kelvin Clips as shown in the diagram below.
    (Make sure that the clips are clean)
  - Rotate the Zero Adjust Knob until the meter indicates zero units.

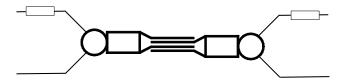

- Either attach the test leads onto a component or attach the leads between two points on a circuit.
- 5. Observe the meter reading.

## **Specifications**

### **General Specifications**

Circuit	Custom one-chip LSI microprocessor circuit		
Display	0.7" (18 mm) LCD with 2000 display counts		
Measurement terminals	4-Terminal Kelvin type		
Measurement ranges	Five (5) ranges (200m, 2, 20, 200, 2000Ω ohms)		
Zero Adjust	±50 count adjustment		
Sampling Time	Approximately 0.4 seconds		
Over range indication	Indication of "1 "		
Operating Temperature	32 °F to 122 °F (0 °C to 50 °C)		
Operating Humidity	80% Relative Humidity max.		
Power Supply	110V (380460) or 220V (380462) ±15%, 50/60Hz		
Power Consumption	Less than 2 VA		
Weight	1.53 lbs. (694g) with cover		
Dimensions	6.6 x 4.8 x 3.4" (167 x 122 x 85 mm) with cover		
Accessories	Power Cable and 4-wire Kelvin clip leads (380465)		

### **Range Specifications**

		Test	Accuracy	Open Circuit
Range	Resolution	Current	(% of Reading)	Voltage
200 mΩ	$0.1 \text{m}\Omega$	100mA	± 0.75% + 4 digits	4.4V
2 Ω	1mΩ	10mA	± 0.75% + 2 digits	3.6V
20 Ω	10m $\Omega$	10mA	± 0.75% + 2 digits	3.6V
200 Ω	0.1 Ω	1mA	± 0.75% + 2 digits	3.5V
2000 Ω	1 Ω	1mA	± 0.75% + 2 digits	3.5V

Note: Specifications tested using RF Field Strength <3V/m and frequency <30MHz

## Two-year Warranty

**Teledyne FLIR LLC warrants this Extech brand instrument** to be free of defects in parts and workmanship for **two years** from date of shipment (a six-month limited warranty applies to sensors and cables). To view the full warranty text please visit: http://www.extech.com/support/warranties.

## Calibration and Repair Services

**Teledyne FLIR LLC offers calibration and repair services** for the Extech brand products we sell. We offer NIST traceable calibration for most of our products. Contact us for information on calibration and repair availability, refer to the contact information below. Annual calibrations should be performed to verify meter performance and accuracy. Product specifications are subject to change without notice. Please visit our website for the most up-to-date product information: <a href="https://www.extech.com">www.extech.com</a>.

## Contact Customer Support

Customer Support Telephone List: https://support.flir.com/contact

Calibration, Repair, and Returns: repair@extech.com

Technical Support: https://support.flir.com

Copyright © 2021 Teledyne FLIR LLC

All rights reserved including the right of reproduction in whole or in part in any form <u>www.extech.com</u>