


Earth Ground Resistance Tester Kit

Model 382252

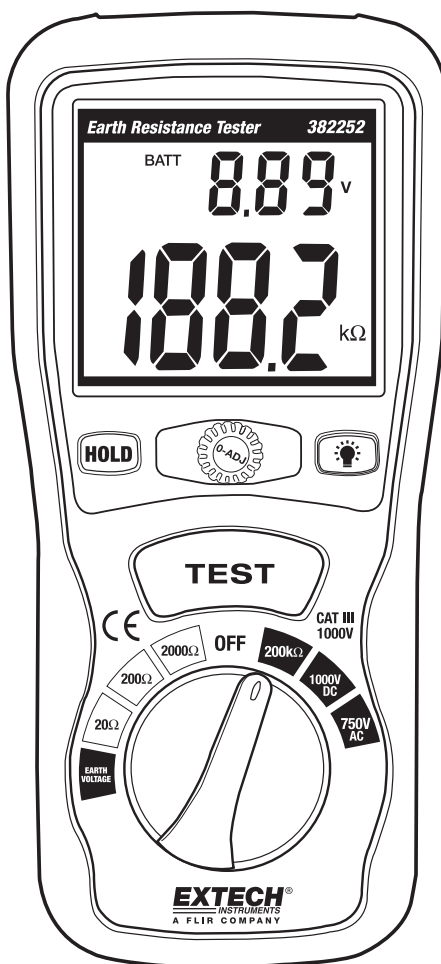

Introduction

Congratulations on your purchase of the Extech 382252 Earth Ground Resistance Tester Kit. This device can measure Earth Ground Resistance (in 3 ranges), Earth Voltage and Resistance (up to 200k Ω), and AC and DC voltage. This device was designed to meet EN61010-1 safety standards. Careful care and use of this meter will provide years of reliable service.

Safety

Please read the following safety information carefully before attempting to operate the meter and use the meter only as specified in this manual.

Environmental safety information

- Do not use meter outdoors when precipitation is likely
- Installation Category III
- Pollution degree 2
- Altitude: 2000 meters max.
- Ambient conditions: 32 to 104°F (0 to 40°C); RH: 80% max
- Observe the following international safety warning symbols

Safety Symbols



Caution: Refer to this manual before using this meter



Dangerous Voltages




Meter is protected throughout by double or reinforced insulation

Organizations that provide rules and guidelines for proper grounding

- The National Electrical Code (NEC)
- Underwriters Laboratories (UL)
- National Fire Protection Association (NFPA)
- American National Standards Institute (ANSI)
- Occupational Safety Health Administration (OSHA)
- Telecommunications Industry Standard (TIA)


Meter Description

1. Digital Display – See Display Description below
2. HOLD key – Freezes measurement value on display
3. Zero ADJ control- Adjusts Zero value on display
4. Backlight key – Turns on Backlight
5. TEST key – Enables Earth Resistance and Earth Voltage Tests
6. Function Selector switch – Selects desired range and function

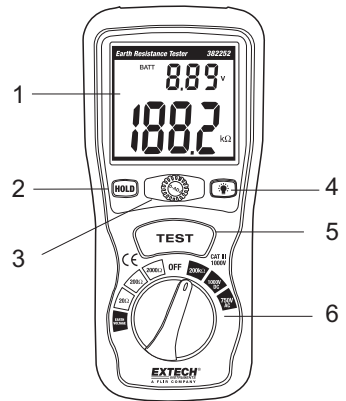


Top View

1. V Ω / C Input (Red)
2. P Input (Yellow)
3. COM / E Input (Green)

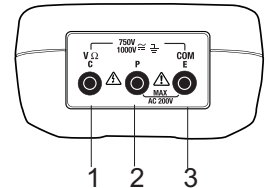

Display Description

1. Test status Icon
2. Battery Charge indicator -
3. Voltage Unit indicator
4. Audible Signal Icon
5. Ω /k Ω Units Indicators
6. Measurement Value
7. AC/DC Voltage Indicators
8. Low Battery Icon
9. HOLD Icon

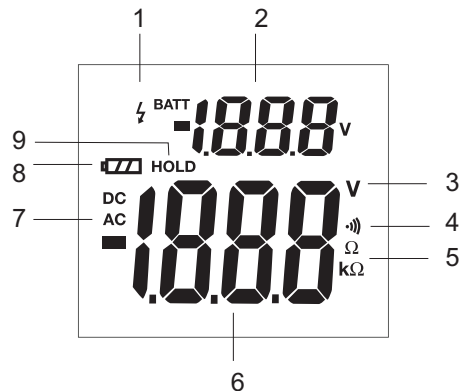


Operation

ZERO Adjustment of Earth Resistance Ranges

1. Connect the long test leads to the meter as follows:
 - a. Green lead to the 'E' terminal (Green jack)
 - b. Yellow lead to the 'P' terminal (Yellow jack)
 - c. Red lead to the 'C' terminal (Red jack)
2. Set the function selector switch to the desired measurement range. (20, 200, 2000 Ω)
3. Short the 3 test leads together by clipping them all to a single earth ground rod.
4. Press the TEST key.
5. Use the 0-Adjust knob to adjust the displayed reading to 000 Ω .
6. Press to TEST key again to end the Zero adjustment process.
7. Perform this adjustment for each range.

Test Connection Diagram

1. 382252 Meter
2. Green Test Lead (E)
3. Yellow Test Lead (P)
4. Red Test Lead (C)
5. Existing Ground rod
6. P1 Auxiliary Earth Bar
7. C1 Auxiliary Earth Bar

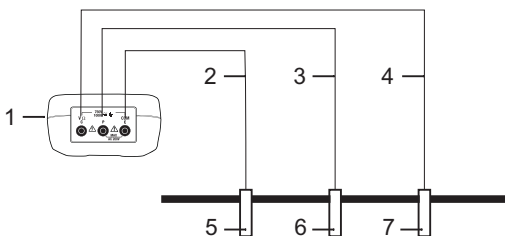

Earth Voltage Test

1. Set the Function selector switch to the EARTH VOLTAGE position (AC or DC)
2. Connect the 2 Voltage test leads to the meter.
Connect the black and red leads - connect the black lead to the E (green jack) and connect the Red test lead to the C (Red jack).
3. Connect the test leads to the item under test.
4. Confirm that the voltage measurement is less than 10V AC; otherwise accurate Earth resistance measurements cannot be made. If voltage is present (higher than 10V AC), the source of the voltage must be found and corrected before testing can continue

Earth Ground Resistance test

1. Connect the 3 test leads to the meter (1) as follows:
 - Green lead (2) to the 'E' terminal
 - Yellow lead (3) to the 'P' terminal
 - Red lead (4) to the 'C' terminal
2. Drive the Auxiliary Earth Bars P1 (6) & C1 (7) into the ground. Align the bars an equal distance apart to the existing Earth ground rod connection and in a straight line as shown in the diagram above.

If the auxiliary bars are placed in close proximity to the ground stake, measurement inaccuracies will result.

(Minimum distance between rods should be no less than 10 feet (3m)).

1. Connect the alligator clip end of the test leads to the Earth bars and existing ground rod connection as shown above:
 - Green lead (2) to the existing ground rod (5)
 - Yellow lead (3) to Earth Bar P1 (6)
 - Red lead (4) to the Earth Bar C1 (7)
2. Set the meter's function switch to the desired resistance range. (20, 200, 2000 Ω).
3. Zero the range as described in the Zero adjustment procedure above.
4. Press the TEST button. . The “” icon will flash and the audible signal will sound.
5. Note the displayed reading.
6. If high resistance is detected, note the value and take appropriate steps to correct the ground connection if necessary.
7. Press to TEST key to end the test.

Readings of “1” Ω are typical when the test leads are not connected to the meter

HOLD Function

The Hold function freezes the latest measurement reading on the LCD.

1. Press the HOLD key to freeze the reading on the LCD
2. Press the HOLD key again to exit the HOLD function.
3. The HOLD function does not retain measurement data if the meter is turned off.

Backlight

1. Press the “” key to turn on the backlight.
2. The backlight will turn off after approximately 15 seconds.

200k Ω Resistance Measurement

1. Connect the red test lead to the V Ω (C) connector and the black test lead to the COM (E) connector.
2. Set the function selector switch to the 200k Ω position.
3. Connect the test probes to the circuit under test.
4. Note the displayed Resistance value.

AC Voltage Measurement


1. Connect the red test lead to the $V\Omega$ connector and the black test lead to the COM connector.
2. Set the function selector switch to the 750V AC position.
3. Connect the test probes to the circuit under test.
4. Note the displayed Voltage value.

DC Voltage Measurement

1. Connect the red test lead to the $V\Omega$ (C) connector and the black test lead to the COM (E) connector.
2. Set the function selector switch to the 1000V DC position.
3. Connect the test probes to the circuit under test.
4. Note the displayed Voltage value.

Three terminal Ground Resistance Measurement

1. Using the Red and Green (1.5m) test leads with the alligator clips, Connect one of the banana jacks of the red test lead to the $V\Omega$ (C) connector (Red) and the other to the P (Yellow) connector on the meter.
2. Connect the Green test lead (1.5m) with the alligator clip to the COM (E) (Green) connector on the meter.
3. Set the function selector switch to the one of the Earth resistance positions. (20, 200, 2000 Ω)
4. Perform the Zero adjustment as described above.
5. Connect the Red and Green test clips to the ground rod or other item to be measured.
4. Press TEST button. The "⚡" icon will flash and the audible signal will sound.
5. Note the resistance reading on the display.
6. Press the TEST button to stop the test.

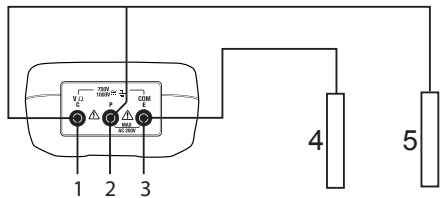


Maintenance

Battery Replacement

When the low battery icon '  ' appears on the LCD, the meter's batteries must be changed.

1. Remove power and disconnect the test leads from the meter.
2. Remove the tilt stand from the rear of the meter.
3. Remove the 4 battery compartment screws with a Phillips head screwdriver.
4. Remove the battery compartment cover and replace the six 1.5V 'AA' batteries.
5. Affix compartment cover and tighten screw.
6. Reattach the tilt stand.

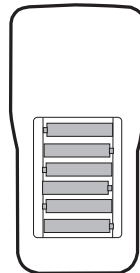

Cleaning and Storage

Periodically wipe the meter's case with a damp cloth and mild detergent; do not use abrasives or solvents. If the meter is not to be used for a period longer than 60 days, remove the batteries and store them separately.

Specifications

General Specifications

Measurements	Earth Ground Resistance (in 3 ranges), Earth Voltage, AC Voltage to 750V and DC Voltage to 1000V and resistance.
Display	Large LCD with dual display
Sampling Time	2.5 times per second
Test lead length	Red lead: 50' (15m), Yellow: 33' (10m), Green: 16' (5m)
Over-range indication	'1' displayed as most significant digit
Power supply	Six 1.5V 'AA' batteries (included)
Low battery indication	LCD displays  icon
Auto Power Off	After approximately 15minutes of use
Safety	EN-61010-1 category III
Weight	24.7oz. (700g) with batteries
Dimensions	7.9 x 3.62 x 2" (200 x 92 x 50 mm)
Operating Conditions	32°F to 104°F (0°C to 40°C), with < 80% RH
Storage Conditions	14°F to 140°F (-10°C to 60°C), with < 70% RH

Measurement Specifications

Measurement	Range	Resolution	Accuracy
Earth Ground Resistance	20Ω	0.01Ω	± (2% reading + 10 digits)
	200Ω	0.1Ω	± (2% reading + 3 digits)
	2000Ω	1Ω	
Earth Voltage Frequency: 40 to 500Hz	0 to 200VAC	0.1V	± (3% reading +3digits)
Resistance	0 to 200kΩ	0.1kΩ	± (1% reading +2 digits)
	Overload Protection: 250 Vrms		
AC Voltage 40 Hz to 400Hz	0 to 750V	1V	± (1.2% reading +10 digits)
	Overload Protection: 750 Vrms, Input Impedance: 10MΩ		
DC Voltage	0 to 1000V	1V	± (0.8% reading +3 digits)
	Overload Protection: 1000 Vrms, Input Impedance: 10MΩ		

Kit contents

382252 Earth Ground Resistance Meter

2 Ground rods - zinc plated iron (22cm)

6 - AA alkaline batteries

3 Ground rod test cables - Red (15m), Yellow (10m), Green(5m)

2 Test leads for Ground Resistance with alligator clips (Red and Green) (1.5m)

2 Test leads for Voltage/Resistance (Black and Red) (1m)

User's manual

Cloth Carrying case

Warranty

FLIR Systems, Inc. warrants this Extech Instruments brand device to be free of defects in parts and workmanship for one year from date of shipment (a six month limited warranty applies to sensors and cables). If it should become necessary to return the instrument for service during or beyond the warranty period, contact the Customer Service Department for authorization. Visit the website www.extech.com for contact information. A Return Authorization (RA) number must be issued before any product is returned. The sender is responsible for shipping charges, freight, insurance and proper packaging to prevent damage in transit. This warranty does not apply to defects resulting from action of the user such as misuse, improper wiring, operation outside of specification, improper maintenance or repair, or unauthorized modification. FLIR Systems, Inc. specifically disclaims any implied warranties or merchantability or fitness for a specific purpose and will not be liable for any direct, indirect, incidental or consequential damages. FLIR's total liability is limited to repair or replacement of the product. The warranty set forth above is inclusive and no other warranty, whether written or oral, is expressed or implied.

Calibration, Repair, and Customer Care Services

FLIR Systems, Inc. offers repair and calibration services for the Extech Instruments products we sell. We offer NIST traceable calibration for most of our products. Contact our Customer Service Department for information on calibration service availability. Annual calibrations should be performed to verify meter performance and accuracy. Technical support and general customer service is also provided, refer to the contact information provided below.

Support Lines: U.S. (877) 439-8324; International: +1 (603) 324-7800

Technical Support: Option 3; E-mail: support@extech.com

Repair & Returns: Option 4; E-mail: repair@extech.com

Product specifications are subject to change without notice

Please visit our website for the most up-to-date information

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

ISO 9001 Certified

Copyright © 2014-2017 FLIR Systems, Inc.

All rights reserved including the right of reproduction in whole or in part in any form

www.extech.com

Garantie

FLIR Systems, Inc. garantit que cet appareil Extech Instruments est exempt de défauts matériaux et de fabrication pendant un an à partir de la date d'envoi (une garantie limitée de six mois s'applique aux capteurs et aux câbles). Si le renvoi de l'appareil pour réparation devient nécessaire durant ou après la période de garantie, contactez le service client pour autorisation. Pour obtenir les coordonnées, visitez le site Web suivant : www.extech.com. Un numéro d'autorisation de retour (AR) doit être délivré avant tout retour de produit. L'expéditeur prend à sa charge les frais d'expédition, le fret, l'assurance et l'emballage correct de l'appareil afin de prévenir toute détérioration durant le transport. Cette garantie ne s'applique pas aux dommages imputables à l'utilisateur, tels que l'usage impropre ou abusif, un mauvais câblage, une utilisation non conforme aux spécifications, un entretien ou une réparation incorrecte, ou toute modification non autorisée. FLIR Systems, Inc. déclinera spécifiquement toute garantie ou qualité marchande ou aptitude à l'emploi prévu, et ne sera en aucun cas tenu responsable pour tout dommage conséquent, direct, indirect ou accidentel. La responsabilité totale de FLIR est limitée à la réparation ou au remplacement du produit. La garantie définie ci-dessus est inclusive et aucune autre garantie, écrite ou orale, n'est exprimée ou implicite.

Calibrage, réparation et services après-vente

FLIR Systems, Inc. offre des services de calibrage et de réparation pour les produits Extech Instruments que nous commercialisons. Nous offrons l'étalonnage traçable NIST pour la plupart de nos produits. Contactez notre service clientèle pour obtenir des informations sur la disponibilité des services d'étalonnage. Un calibrage doit être effectué chaque année pour vérifier les performances et la précision du mètre. Nous offrons également une assistance technique et un service à la clientèle. Veuillez vous reporter aux coordonnées fournies ci-dessous.

Lignes d'assistance: États-Unis (877) 439-8324; international: +1 (603) 324-7800

Service d'assistance technique : Option 3 ; E-mail : support@extech.com

Réparations et retours : Option 4 ; E-mail : repair@extech.com

Les spécifications produit sont sujettes à modifications sans préavis.

Pour les toutes dernières informations, veuillez visiter notre site Web.

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

Certifié ISO 9001

Copyright © 2014-2017 FLIR Systems, Inc.

Tous droits réservés, y compris la reproduction partielle ou totale sous quelque forme que ce soit.

www.extech.com

Garantía

FLIR Systems, Inc., garantiza este dispositivo marca Extech Instruments para estar libre de defectos en partes o mano de obra durante un año a partir de la fecha de embarque (se aplica una garantía limitada de seis meses para cables y sensores). Si fuera necesario regresar el instrumento para servicio durante o después del período de garantía, llame al Departamento de Servicio a Clientes para obtener autorización. Visite www.extech.com para Información de contacto. Se debe expedir un número de Autorización de Devolución (AD) antes de regresar cualquier producto. El remitente es responsable de los gastos de embarque, flete, seguro y empaque apropiado para prevenir daños en tránsito. Esta garantía no se aplica a defectos resultantes de las acciones del usuario como el mal uso, alambrado equivocado, operación fuera de las especificaciones, mantenimiento o reparación inadecuada o modificación no autorizada. FLIR Systems, Inc., rechaza específicamente cualesquier garantías implícitas o factibilidad de comercialización o idoneidad para cualquier propósito determinado y no será responsable por cualesquier daños directos, indirectos, incidentales o consecuentes. La responsabilidad total de FLIR está limitada a la reparación o reemplazo del producto. La garantía precedente es inclusiva y no hay otra garantía ya sea escrita u oral, expresa o implícita.

Servicios de calibración, reparación y atención a clientes

FLIR Systems, Inc., ofrece servicios de reparación y calibración para los productos que vendemos de Extech Instruments. Ofrecemos calibración rastreable a NIST para la mayoría de nuestros productos, para información sobre la disponibilidad del servicio de calibración por favor llame a nuestro Departamento de Servicio al Cliente.

Para verificar el funcionamiento y precisión se debe realizar la calibración anual. Además se provee Soporte Técnico y servicios generales al cliente, consulte la información de contacto en seguida.

Líneas de soporte: EE.UU. (877) 439-8324; Internacional: +1 (603) 324-7800

Soporte Técnico Opción 3; correo electrónico: support@extech.com

Reparación / Devoluciones: Opción 4; correo electrónico: repair@extech.com

Las especificaciones del producto están sujetas a cambios sin aviso

Por favor visite nuestra página en Internet para la información más actualizada

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

Certificado ISO 9001

Copyright © 2014-2017 FLIR Systems, Inc.

Reservados todos los derechos, incluyendo el derecho de reproducción total o parcial en cualquier medio

www.extech.com