


## Model 380942

## True RMS AC/DC 30A Mini Clamp-on Meter

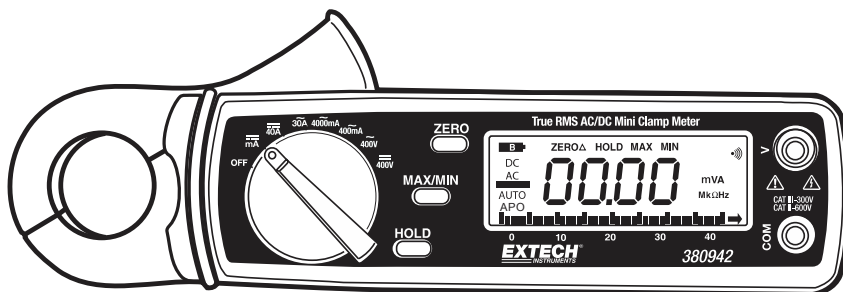


## Introduction

Congratulations on your purchase of the Extech Model 380942 DC/AC Clamp Meter. This meter is shipped fully tested and calibrated and, with proper use, will provide years of reliable service.

## Meter Description

1. Current sense jaw
2. Measurement Trigger
3. Function switch
4. Data HOLD key
5. MAX / MIN key
6. One-touch DCA ZERO key
7. LCD Display
8. Positive input terminal for Voltage
9. COM terminal

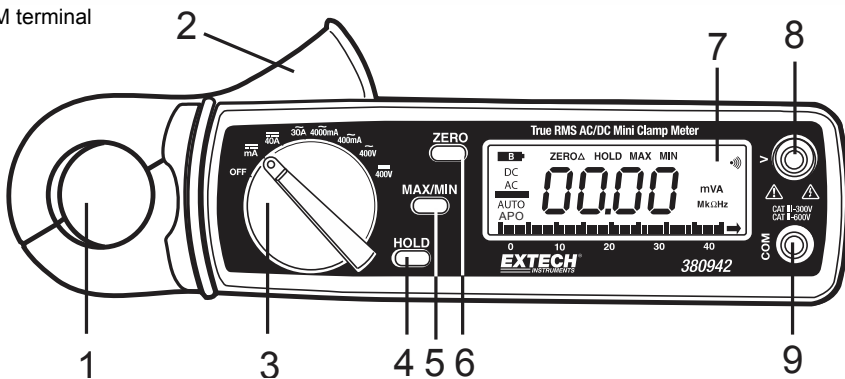

## Safety Symbols and Information



Caution ! Risk of danger. Refer to accompanying documents.



Caution ! Risk of electric shock



Earth (Ground)

This meter has been designed to be safe in use, but the operator must use caution in its operation. The rules listed below should be carefully followed for safe operation.

1. **NEVER** apply voltage or current to the meter that exceeds the specified maximum:
2. **USE EXTREME CAUTION** when working with high voltages.
3. **DO NOT** measure voltage if the voltage on the "COM" input jack exceeds 600V above earth ground.
4. **ALWAYS** turn off the power and disconnect the test leads before opening the back to replace the fuse or batteries.
5. **NEVER** operate the meter unless the back cover and the battery/fuse door are in place and fastened securely.

## Operation

### AC Current Measurements (True RMS)

**WARNING:** To avoid electric shock, disconnect the test leads from the meter before making current measurements.

- 1) Set the Function switch to the 400mA, 4000mA, or 30A AC range.
- 2) Press the jaw trigger and clamp around, fully enclosing a single conductor. Do not allow a gap between the two halves of the jaw. Refer to the diagram at right for the correct way to enclose a single conductor.
- 3) Read the AC Current value on the LCD's digital or bargraph display.



### DC Current Measurements

**WARNING:** To avoid electric shock, disconnect the test leads from the meter before making current measurements.

- 1) Set the Function switch to the mA or 40A DC range.
- 2) Press the DCA zero key to null the meter display.
- 3) Press the Trigger to open the current sense Jaw.
- 4) Fully enclose the conductor to be measured. Do not allow a gap between the two halves of the jaw.
- 5) Read the DC Current value on the LCD's digital or bargraph display.

### AC Voltage Measurements (True RMS)

**WARNING:** To avoid electric shock or damage to the meter, do not make any voltage measurements that exceed the maximum specified limits.

- 1) Set the Function switch to the 400V AC position.
- 2) Insert the test leads to the meter as follows: Red lead to "V" terminal; Black lead to the COM input.
- 3) Connect the test leads to the circuit or device under test.
- 4) Read the AC Voltage value on the LCD's digital or bargraph display.

### DC Voltage Measurements

**WARNING:** To avoid electric shock or damage to the meter, do not make any voltage measurements that exceed the maximum specified limits.

- 1) Set the Function switch to the 400V DC position.
- 2) Insert the test leads to the meter as follows: Red lead to "V" terminal; Black lead to the COM input.
- 3) Connect the test leads to the circuit or device under test.
- 4) Read the DC Voltage value on the LCD's digital or bargraph display.

## ***Advanced Features***

---

### **Relative Measurements**

- 1) Press the ZERO key. The displayed reading will zero and the word ZERO will appear on the upper portion of the LCD.
- 2) All subsequent measurements will now be displayed with respect to the zeroed reading. For example, if a 20A reading is zeroed and a 30A reading is subsequently measured, the LCD will display 10A.
- 3) Press the zero button once more to return to normal operating mode.
- 4) Note that Relative mode is not available if MIN/MAX mode is enabled.
- 5) LCD displays relative numerical value without bargraph.

### **Data Hold**

To freeze the current reading on the LCD, press the Data Hold key. The word HOLD will appear on the LCD while the meter is in the Data Hold mode. To release the Data Hold function and return the meter to normal operation, press the Data Hold key again. The word HOLD will switch off.

### **MIN/MAX Readings**

Pressing the MIN/MAX key allows the meter to display ONLY the highest and the lowest readings encountered. Press the MIN/MAX key once to view the minimum reading, press it again to view the maximum reading. The LCD will toggle between the MIN and MAX values. Press and hold MIN/MAX button for more than 2 seconds to return to normal operating mode. Zero function will be disabled when MIN/MAX is enabled.

### **Auto Power Off**

To extend battery life, the meter will auto power off after 15 minutes of operation (APO will be displayed on LCD). To resume operation, either turn the meter OFF for 3 seconds and then ON again, or press the HOLD button. Pressing any button or turning the rotary switch will reset the 15 minute timer. To disable the auto power off function, press down the "HOLD" key while turning the meter on.

## ***Maintenance***

---

### **Battery Replacement**

- 1) When the low battery symbol appears on the LCD the batteries must be replaced.
- 2) Turn the meter OFF and remove the rear battery compartment Phillips screw.
- 3) Lift off the battery compartment cover and replace the two 1.5V AA batteries.
- 4) Replace the compartment cover and secure the screw.

### **Cleaning**

**Caution:** Use only a dry cloth to clean the plastic case.

## Specifications

### General Specifications

|                      |                                                         |
|----------------------|---------------------------------------------------------|
| Display              | 3-3/4 digit (4032 count) LCD with 40 segment bargraph   |
| Functions            | ACA, DCA, ACV, DCV                                      |
| Polarity             | Minus sign ( - ) indicates negative polarity            |
| Current sensor       | Hall effect sensor type                                 |
| Overload indication  | OL                                                      |
| DCA zero adjust      | One touch zero key                                      |
| Display rate         | 3 readings/second (30 readings/second for bargraph)     |
| Battery              | Two 1.5V AA batteries                                   |
| Operating conditions | 4°F to 122°F (-10°C to 50°C); < 85% Relative Humidity   |
| Storage conditions   | - 4°F to 140°F (-20°C to 60°C); < 75% Relative Humidity |
| Altitude             | Operate at less than 2000 meters (for indoor use only)  |
| Power consumption    | Approximately 15mA DC                                   |
| Weight               | 6.2 oz. (190g) including battery                        |
| Dimensions           | 7.2 x 2.5 x 1.4" (183 x 63.6 x 35.6mm) (H x W x D)      |
| Jaw opening          | 0.9" (23mm)                                             |
| Standards            | IEC 1010 Category III 300V, Category II 600V            |

### Range Specifications (23°C±5°C)

| Function                        | Range  | Resolution | Accuracy (of reading) |                    | Overload protect |
|---------------------------------|--------|------------|-----------------------|--------------------|------------------|
| <b>DC Current</b>               | 4000mA | 1mA        | ± (2.0% + 3d)         |                    | 40A DC           |
|                                 | 30A    | 10mA       |                       |                    | 100A DC          |
|                                 | 40A    | 10mA       | ± (2.5% + 3d)         |                    | 100A DC          |
| <b>AC Current</b><br>(True RMS) |        |            | <b>50/60Hz</b>        | <b>40 to 100Hz</b> |                  |
|                                 | 400mA  | 0.1mA      | ±(1.5% + 5d)          | ±(2.0% + 5d)       | 40A AC           |
|                                 |        |            | <b>50/60Hz</b>        | <b>40 to 1kHz</b>  |                  |
|                                 | 4000mA | 1mA        | ±(2.5% + 5d)          | ±(3.0% + 5d)       | 40A AC           |
|                                 | 30A    | 10mA       | ±(2.0% + 5d)          | ±(2.5% + 5d)       | 100A AC          |
| <b>DC Voltage</b>               | 400V   | 0.1V       | ± (1.0% + 2d)         |                    | 1000V DC         |
| <b>AC Voltage</b><br>(True RMS) |        |            | <b>50/60Hz</b>        | <b>40 to 1kHz</b>  |                  |
|                                 | 400V   | 0.1V       | ±(1.5% + 4d)          | ±(2.0% + 5d)       | 800V AC          |

### Specification Notes

- AC Voltage and Current Crest Factor: < 3
- AC / DC Voltage Input Impedance: 10MΩ

## Warranty

---

**FLIR Systems, Inc. warrants this Extech Instruments brand device to be free of defects in parts and workmanship for one year from date of shipment (a six month limited warranty applies to sensors and cables). If it should become necessary to return the instrument for service during or beyond the warranty period, contact the Customer Service Department for authorization. Visit the website [www.extech.com](http://www.extech.com) for contact information. A Return Authorization (RA) number must be issued before any product is returned. The sender is responsible for shipping charges, freight, insurance and proper packaging to prevent damage in transit. This warranty does not apply to defects resulting from action of the user such as misuse, improper wiring, operation outside of specification, improper maintenance or repair, or unauthorized modification. FLIR Systems, Inc. specifically disclaims any implied warranties or merchantability or fitness for a specific purpose and will not be liable for any direct, indirect, incidental or consequential damages. FLIR's total liability is limited to repair or replacement of the product. The warranty set forth above is inclusive and no other warranty, whether written or oral, is expressed or implied.**

## Calibration, Repair, and Customer Care Services

---

**FLIR Systems, Inc. offers repair and calibration services** for the Extech Instruments products we sell. NIST certification for most products is also provided. Call the Customer Service Department for information on calibration services available for this product. Annual calibrations should be performed to verify meter performance and accuracy. Technical support and general customer service is also provided, refer to the contact information provided below.

**Support Lines: U.S. (877) 439-8324; International: +1 (603) 324-7800**

Technical Support: Option 3; E-mail: [support@extech.com](mailto:support@extech.com)

Repair & Returns: Option 4; E-mail: [repair@extech.com](mailto:repair@extech.com)

Product specifications are subject to change without notice

**Please visit our website for the most up-to-date information**

**[www.extech.com](http://www.extech.com)**

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

**ISO 9001 Certified**

**Copyright © 2014 FLIR Systems, Inc.**

All rights reserved including the right of reproduction in whole or in part in any form

**[www.extech.com](http://www.extech.com)**

## Garantie

**FLIR Systems, Inc. garantit que cet appareil Extech Instruments est exempt de défauts matériaux et de fabrication pendant un an à partir de la date d'envoi (une garantie limitée de six mois s'applique aux capteurs et aux câbles). Si le renvoi de l'appareil pour réparation devient nécessaire durant ou après la période de garantie, contactez le service client pour autorisation. Pour obtenir les coordonnées, visitez le site Web suivant : [www.extech.com](http://www.extech.com). Un numéro d'autorisation de retour (AR) doit être délivré avant tout retour de produit. L'expéditeur prend à sa charge les frais d'expédition, le fret, l'assurance et l'emballage correct de l'appareil afin de prévenir toute détérioration durant le transport. Cette garantie ne s'applique pas aux dommages imputables à l'utilisateur, tels que l'usage impropre ou abusif, un mauvais câblage, une utilisation non conforme aux spécifications, un entretien ou une réparation incorrecte, ou toute modification non autorisée. FLIR Systems, Inc. déclinera spécifiquement toute garantie ou qualité marchande ou aptitude à l'emploi prévu, et ne sera en aucun cas tenu responsable pour tout dommage conséquent, direct, indirect ou accidentel. La responsabilité totale de FLIR est limitée à la réparation ou au remplacement du produit. La garantie définie ci-dessus est inclusive et aucune autre garantie, écrite ou orale, n'est exprimée ou implicite.**

## Calibrage, réparation et services après-vente

**FLIR Systems, Inc. offre des services de calibrage et de réparation pour les produits Extech Instruments que nous commercialisons. Nous fournissons également une certification NIST pour la plupart des produits. Contactez notre service client pour toute information sur les services de calibrage disponibles pour ce produit. Un calibrage doit être effectué chaque année pour vérifier les performances et la précision du mètre. Nous offrons également une assistance technique et un service à la clientèle. Veuillez vous reporter aux coordonnées fournies ci-dessous.**

**Lignes d'assistance: États-Unis (877) 439-8324; international: +1 (603) 324-7800**

Service d'assistance technique : Option 3 ; E-mail : [support@extech.com](mailto:support@extech.com)

Réparations et retours : Option 4 ; E-mail : [repair@extech.com](mailto:repair@extech.com)

Les spécifications produit sont sujettes à modifications sans préavis.

**Pour les toutes dernières informations, veuillez visiter notre site Web.**

**[www.extech.com](http://www.extech.com)**

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

***Certifié ISO 9001***

**Copyright © 2014 FLIR Systems, Inc.**

Tous droits réservés, y compris la reproduction partielle ou totale sous quelque forme que ce soit.

**[www.extech.com](http://www.extech.com)**

## Garantía

**FLIR Systems, Inc.**, garantiza este dispositivo marca Extech Instruments para estar libre de defectos en partes o mano de obra durante un año a partir de la fecha de embarque (se aplica una garantía limitada de seis meses para cables y sensores). Si fuera necesario regresar el instrumento para servicio durante o después del periodo de garantía, llame al Departamento de Servicio a Clientes para obtener autorización. Visite [www.extech.com](http://www.extech.com) para Información de contacto. Se debe expedir un número de Autorización de Devolución (AD) antes de regresar cualquier producto. El remitente es responsable de los gastos de embarque, flete, seguro y empaque apropiado para prevenir daños en tránsito. Esta garantía no se aplica a defectos resultantes de las acciones del usuario como el mal uso, alambrado equivocado, operación fuera de las especificaciones, mantenimiento o reparación inadecuada o modificación no autorizada. FLIR Systems, Inc., rechaza específicamente cualesquier garantías implícitas o factibilidad de comercialización o idoneidad para cualquier propósito determinado y no será responsable por cualesquier daños directos, indirectos, incidentales o consecuentes. La responsabilidad total de FLIR está limitada a la reparación o reemplazo del producto. La garantía precedente es inclusiva y no hay otra garantía ya sea escrita u oral, expresa o implícita.

## Servicios de calibración, reparación y atención a clientes

**FLIR Systems, Inc.**, ofrece servicios de reparación y calibración para los productos que vendemos de Extech Instruments. Además ofrecemos certificación NIST para la mayoría de los productos. Llame al Departamento de Servicio al Cliente para solicitar información de calibración para este producto. Para verificar el funcionamiento y precisión se debe realizar la calibración anual. Además se provee Soporte Técnico y servicios generales al cliente, consulte la información de contacto en seguida.

**Líneas de soporte: EE.UU. (877) 439-8324; Internacional: +1 (603) 324-7800**

Soporte Técnico Opción 3; correo electrónico: [support@extech.com](mailto:support@extech.com)

Reparación / Devoluciones: Opción 4; correo electrónico: [repair@extech.com](mailto:repair@extech.com)

Las especificaciones del producto están sujetas a cambios sin aviso

**Por favor visite nuestra página en Internet para la información más actualizada**

**[www.extech.com](http://www.extech.com)**

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

***Certificado ISO 9001***

**Copyright © 2014 FLIR Systems, Inc.**

Reservados todos los derechos, incluyendo el derecho de reproducción total o parcial en cualquier medio

**[www.extech.com](http://www.extech.com)**