


Digital Force Gauge

Models 475040 and 475044

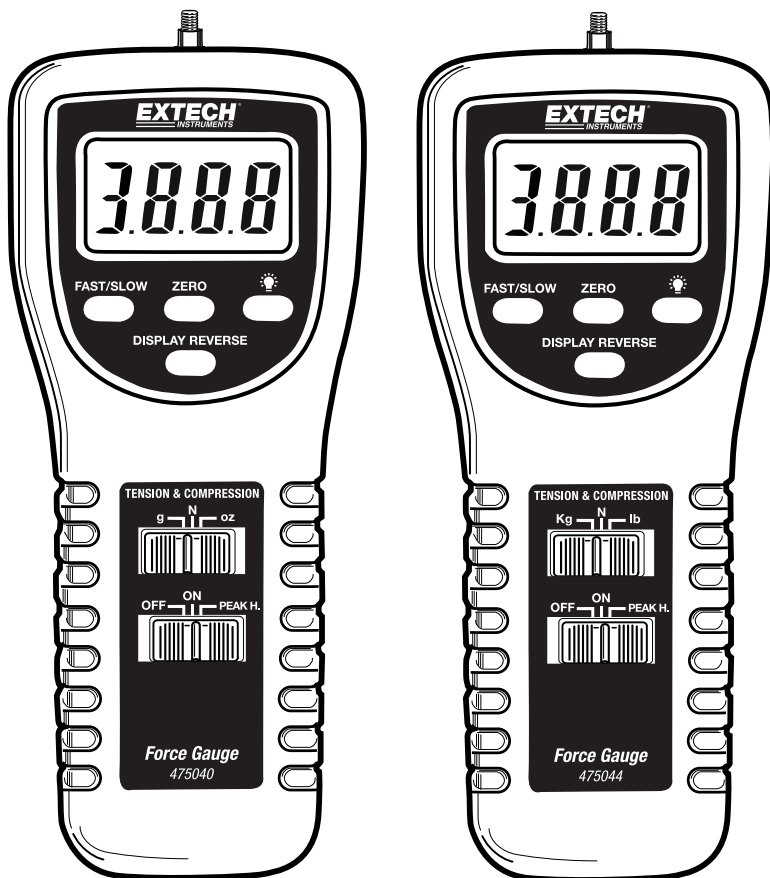


Introduction

Thank you for selecting the Extech Digital Force Gauge. This professional meter, with proper care, will provide years of safe reliable service. This device measures Tension or Compression (Push or Pull) to 5kg (475040) or 20kg (475044). The reversible display indicates readings in grams, ounces, or Newtons. This meter offers Peak Hold and a Zero function. Please visit the Extech Instruments website (www.extech.com) to check for the latest version of this User Guide.

Meter Description

FRONT DESCRIPTION

1. Universal sensing head
2. LCD Display
3. Fast response indicator
4. Units select switch
5. OFF/ON/PEAK HOLD button
6. Battery compartment cover (on rear)

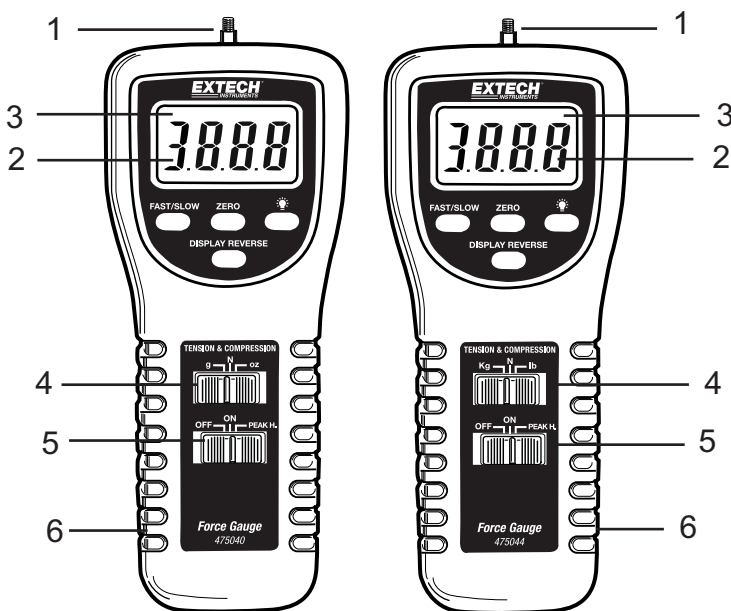


METER BACK AND MOUNTING SCREW DESCRIPTION

1. Mounting screws:

Hex head (#4 Allen wrench) with a thread size of metric (ISO) M5 x 0.8. The spacing between screws is 60.0 mm (2.36")

2. Battery compartment access screws

3. Battery compartment

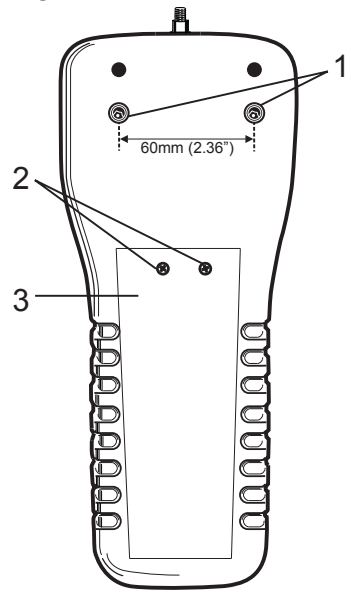

Operation

Preparation for Measurement

1. The 475044 or 474040 automatically determine TENSION or COMPRESSION (Push or Pull) force during use. Compression displays as a negative value and Tension displays as a positive value.
2. Select units of measure (grams/kilograms, ounces/pounds, or Newtons) via the units select button.
3. Attach the desired adapter (tension – hook; compression.- flat, cone or chisel head) to the Universal Sensing Head.
4. Select FAST or SLOW response. The FAST setting permits the capture of fast measurement changes and the SLOW setting provides an averaged reading display.
5. Zero the display before each measurement via the Zero button.

Note: The sensing head with adapter must be in line with the object being measured. Avoid rotating the sensing head. Refer to the figure below.

Figure 1 – Correct and Incorrect Angles of Measurement



Normal Measurement Mode

1. Slide the POWER switch to the ON position.
2. Zero the meter before each measurement.
3. Touch the adapter to the object being measured in a straight line. Refer to Fig.1.
4. Begin measurement by applying force (Push or Pull). Read the LCD display.
5. After completing the measurement, the display will indicate "0.00" if the position and angle of the Force Gauge have not changed.
6. If the position or angle of the Force Gauge changes during a measurement, the display may show one of the following:
 - a) The display over-ranges because the initial force of the transducer **decreases** due to a change in the position or angle of the Gauge after measurement.
 - b) The display indicates any value such as "12", "25", etc. This occurs because the initial force of the transducer **increases** due to a change in the position or angle of the Gauge after measurement.

Note: Be sure to press "ZERO" before taking any new measurements.

Mounting

For best results, mount the Digital Force Gauge to a test stand. Mounting holes are provided on the rear of the meter.

Maintenance

Battery Replacement

The low battery indication appears as a "LO" on the display when battery voltage is less than 6.8V. To replace the battery:

1. Remove the two screws from the battery compartment cover.
2. Lift off the battery cover.
3. Replace with 6 x 1.5V AA (UM-3) batteries. Observe polarity carefully.
4. Replace compartment cover and screws.

Battery Safety Reminders

- Please dispose of batteries responsibly; always observe local, state, and federal regulations with regard to battery disposal.
- Never dispose of batteries in a fire. Batteries may explode or leak.
- Never mix battery types. Always install new batteries of the same type.

Specifications

	475044	475040
Range	44 lbs, 20kg, 196 Newtons	176oz, 5000g, 49 Newtons
Accuracy (23°C)	±(0.5%rdg + 2 digits)	± (0.4%rdg + 1 digit)
Resolution	0.01lbs, 0.01kg, 0.05 Newtons	0.05oz, 1g, 0.01 Newtons
Overload Capacity	30kg	10kg
Circuit	Custom LSI microprocessor circuit	
Zero adjust	Button for Peak Hold and normal display zero	
Display	5 digits, 16 mm (0.63") LCD display	
Update Rate	Fast mode 0.2 secs; Slow mode 0.6 secs.	
Over-range Indicator	Displays "-----"	
Zero Control	Maximum capacity	
Full Scale Deflection: 5000g	Approx. 2mm max.	
Full Scale Deflection: 20kg	Approx. 0.4mm max.	
Transducer type	Load cell	
Peak Hold	Freezes Max reading on display	
Operating Temperature	0 °C to 50 °C (32 °F to 122 °F).	
Operating RH	Max. 80% RH.	
Power Supply	6x 1.5V AA (UM-3) size battery or DC 9V adapter (not included)	
Weight	480g / 1.1 lbs.	
Size	215 x 90 x 45 mm (8.5 x 3.5 x 1.8")	
Mounting Holes	Located on rear of gauge	
Accessories	Tension adapter (hook), compression adapters (flat, cone, and chisel), 5" extension rod, 6 x 1.5V AA batteries, case	

Warranty

FLIR Systems, Inc. warrants this Extech Instruments brand device to be free of defects in parts and workmanship for one year from date of shipment (a six month limited warranty applies to sensors and cables). If it should become necessary to return the instrument for service during or beyond the warranty period, contact the Customer Service Department for authorization. Visit the website www.extech.com for contact information. A Return Authorization (RA) number must be issued before any product is returned. The sender is responsible for shipping charges, freight, insurance and proper packaging to prevent damage in transit. This warranty does not apply to defects resulting from action of the user such as misuse, improper wiring, operation outside of specification, improper maintenance or repair, or unauthorized modification. FLIR Systems, Inc. specifically disclaims any implied warranties or merchantability or fitness for a specific purpose and will not be liable for any direct, indirect, incidental or consequential damages. FLIR's total liability is limited to repair or replacement of the product. The warranty set forth above is inclusive and no other warranty, whether written or oral, is expressed or implied.

Calibration, Repair, and Customer Care Services

FLIR Systems, Inc. offers repair and calibration services for the Extech Instruments products we sell. NIST certification for most products is also provided. Call the Customer Service Department for information on calibration services available for this product. Annual calibrations should be performed to verify meter performance and accuracy. Technical support and general customer service is also provided, refer to the contact information provided below.

Support Lines: U.S. (877) 439-8324; International: +1 (603) 324-7800

Technical Support: Option 3; E-mail: support@extech.com

Repair & Returns: Option 4; E-mail: repair@extech.com

Product specifications are subject to change without notice

Please visit our website for the most up-to-date information

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

ISO 9001 Certified

Copyright © 2014 FLIR Systems, Inc.

All rights reserved including the right of reproduction in whole or in part in any form

www.extech.com

Garantie

FLIR Systems, Inc. garantit que cet appareil Extech Instruments est exempt de défauts matériaux et de fabrication pendant un an à partir de la date d'envoi (une garantie limitée de six mois s'applique aux capteurs et aux câbles). Si le renvoi de l'appareil pour réparation devient nécessaire durant ou après la période de garantie, contactez le service client pour autorisation. Pour obtenir les coordonnées, visitez le site Web suivant : www.extech.com. Un numéro d'autorisation de retour (AR) doit être délivré avant tout retour de produit. L'expéditeur prend à sa charge les frais d'expédition, le fret, l'assurance et l'emballage correct de l'appareil afin de prévenir toute détérioration durant le transport. Cette garantie ne s'applique pas aux dommages imputables à l'utilisateur, tels que l'usage impropre ou abusif, un mauvais câblage, une utilisation non conforme aux spécifications, un entretien ou une réparation incorrecte, ou toute modification non autorisée. FLIR Systems, Inc. déclinera spécifiquement toute garantie ou qualité marchande ou aptitude à l'emploi prévu, et ne sera en aucun cas tenu responsable pour tout dommage conséquent, direct, indirect ou accidentel. La responsabilité totale de FLIR est limitée à la réparation ou au remplacement du produit. La garantie définie ci-dessus est inclusive et aucune autre garantie, écrite ou orale, n'est exprimée ou implicite.

Calibrage, réparation et services après-vente

FLIR Systems, Inc. offre des services de calibrage et de réparation pour les produits Extech Instruments que nous commercialisons. Nous fournissons également une certification NIST pour la plupart des produits. Contactez notre service client pour toute information sur les services de calibrage disponibles pour ce produit. Un calibrage doit être effectué chaque année pour vérifier les performances et la précision du mètre. Nous offrons également une assistance technique et un service à la clientèle. Veuillez vous reporter aux coordonnées fournies ci-dessous.

Lignes d'assistance: États-Unis (877) 439-8324; international: +1 (603) 324-7800

Service d'assistance technique : Option 3 ; E-mail : support@extech.com

Réparations et retours : Option 4 ; E-mail : repair@extech.com

Les spécifications produit sont sujettes à modifications sans préavis.

Pour les toutes dernières informations, veuillez visiter notre site Web.

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

Certifié ISO 9001

Copyright © 2014 FLIR Systems, Inc.

Tous droits réservés, y compris la reproduction partielle ou totale sous quelque forme que ce soit.

www.extech.com

Garantía

FLIR Systems, Inc., garantiza este dispositivo marca Extech Instruments para estar libre de defectos en partes o mano de obra durante un año a partir de la fecha de embarque (se aplica una garantía limitada de seis meses para cables y sensores). Si fuera necesario regresar el instrumento para servicio durante o después del periodo de garantía, llame al Departamento de Servicio al Cliente para obtener autorización. Visite www.extech.com para Información de contacto. Se debe expedir un número de Autorización de Devolución (AD) antes de regresar cualquier producto. El remitente es responsable de los gastos de embarque, flete, seguro y empaque apropiado para prevenir daños en tránsito. Esta garantía no se aplica a defectos resultantes de las acciones del usuario como el mal uso, alambrado equivocado, operación fuera de las especificaciones, mantenimiento o reparación inadecuada o modificación no autorizada. FLIR Systems, Inc., rechaza específicamente cualesquier garantías implícitas o factibilidad de comercialización o idoneidad para cualquier propósito determinado y no será responsable por cualesquier daños directos, indirectos, incidentales o consecuentes. La responsabilidad total de FLIR está limitada a la reparación o reemplazo del producto. La garantía precedente es inclusiva y no hay otra garantía ya sea escrita u oral, expresa o implícita.

Servicios de calibración, reparación y atención a clientes

FLIR Systems, Inc., ofrece servicios de reparación y calibración para los productos que vendemos de Extech Instruments. Además ofrecemos certificación NIST para la mayoría de los productos. Llame al Departamento de Servicio al Cliente para solicitar información de calibración para este producto. Para verificar el funcionamiento y precisión se debe realizar la calibración anual. Además se provee Soporte Técnico y servicios generales al cliente, consulte la información de contacto en seguida.

Líneas de soporte: EE.UU. (877) 439-8324; Internacional: +1 (603) 324-7800

Soporte Técnico Opción 3; correo electrónico: support@extech.com

Reparación / Devoluciones: Opción 4; correo electrónico: repair@extech.com

Las especificaciones del producto están sujetas a cambios sin aviso

Por favor visite nuestra página en Internet para la información más actualizada

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

Certificado ISO 9001

Copyright © 2014 FLIR Systems, Inc.

Reservados todos los derechos, incluyendo el derecho de reproducción total o parcial en cualquier medio

www.extech.com